



Operation instruction

V- Belt driven Diesel- Unit Bulkline 650

- 1. Carriage**
Check for any damage
- 2. Delivery situation compressor**
Filled with oil → **check oil level on the dipstick and add as required**
- 3. Delivery situation drive-motor**
Filled with oil → **check oil level on the dipstick and add as required**
- 4. Deliver situation fuel tank**
Without fuel → **fill with diesel**
- 5. Connecting battery**
→ **Connect positive and negative cables to the battery**
- 6. Start compressor**
→ **Never start the compressor against discharge pressure**
- 7. Check Fuel lines for leaks**
- 8. Follow the maintenance plan**

Gardner Denver Drum Ltd
PO Box 178, Springmill Street
Bradford, West Yorkshire
BD5 7YH. United Kingdom
Tel: +44 (0) 1274 718100
Fax: +44 (0) 1274 111666
E-mail: info@gardnerdenver.com
<http://www.gardnerdenver.com>



Operation instruction

V- Belt driven Diesel- Unit Bulkline 650

- 1. Carriage**
Check for any damage
- 2. Delivery situation compressor**
Filled with oil → **check oil level on the dipstick and add as required**
- 3. Delivery situation drive-motor**
Filled with oil → **check oil level on the dipstick and add as required**
- 4. Deliver situation fuel tank**
Without fuel → **fill with diesel**
- 5. Connecting battery**
→ **Connect positive and negative cables to the battery**
- 6. Start compressor**
→ **Never start the compressor against discharge pressure**
- 7. Check Fuel lines for leaks**
- 8. Follow the maintenance plan**

Gardner Denver Drum Ltd
PO Box 178, Springmill Street
Bradford, West Yorkshire
BD5 7YH. United Kingdom
Tel: +44 (0) 1274 718100
Fax: +44 (0) 1274 111666
E-mail: info@gardnerdenver.com
<http://www.gardnerdenver.com>

